

# **DOWNFORCE - AIR SCOOP**

## **INSTALLATION AND USER'S INSTRUCTIONS**

Thank you for purchasing the NSX Door Panel from Downforce.

Before beginning any installation, please take time to thoroughly read through the instructions. The door panel requires paint before installation.

<b>PART NAME</b>	<b>DOOR PANEL</b>
<b>PART NUMBER</b>	<b>DF-AAA232</b>
<b>VEHICLE</b>	<b>ACURA NSX 1991-2001</b>

## 1 Contents

2 panels  
1 roll of tape




## 2 Tools and Equipments Needed



Scissors

## 3 Setup and Preparations

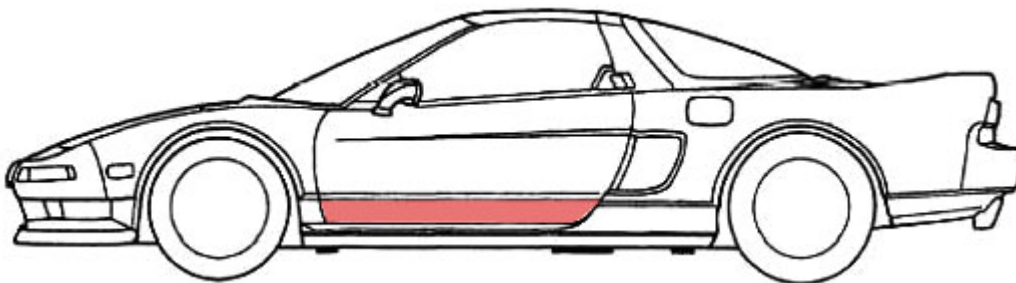


Once the door panels are painted and finished, make sure the door is thoroughly cleaned using a degreaser such as dishwashing soap or window cleaner. Using some denatured alcohol is fine as well.


# 4

## Tape Setup


**Notice** that the panels should be slightly bowed (*the center should be raised, pointing away from the doors*). It is done to prevent the door panel edges from protruding outwards.

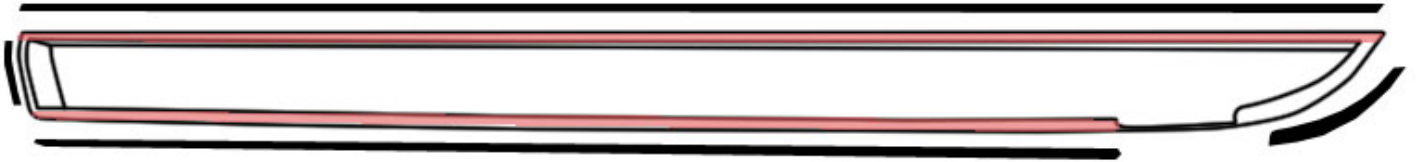

The top and bottom tape should go edge to edge. These are the most important sides on the panel.

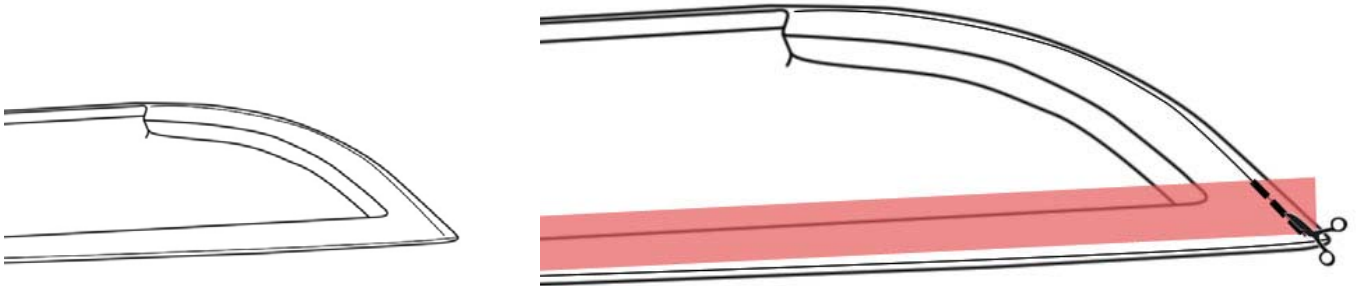

This is how the tape should look when done.


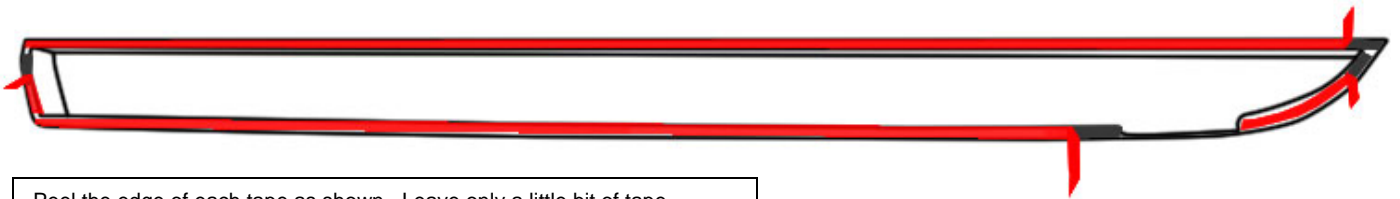


Peel the edge of each tape as shown. Leave only a little bit of tape exposed so you can test fit and change positions without all of the tape sticking onto the door.

# 5

## Alignment

The door panel should be aligned against the bottom edge of the door. This will give you an even level. To align the placement position of the panel, use the front of the door panel which should be contoured to the door. Make sure there is clearance to open the door without hitting the fender. Gently and slowly open the door all the way.

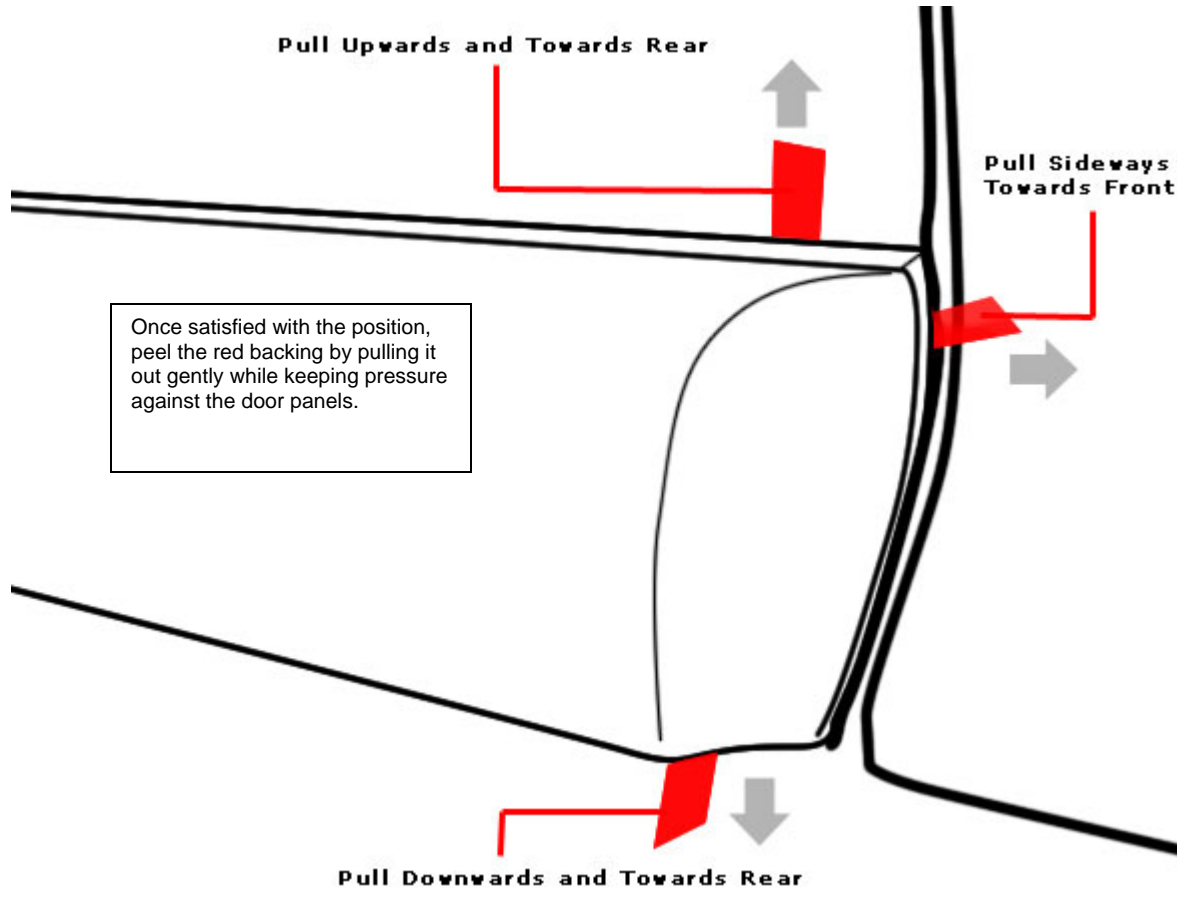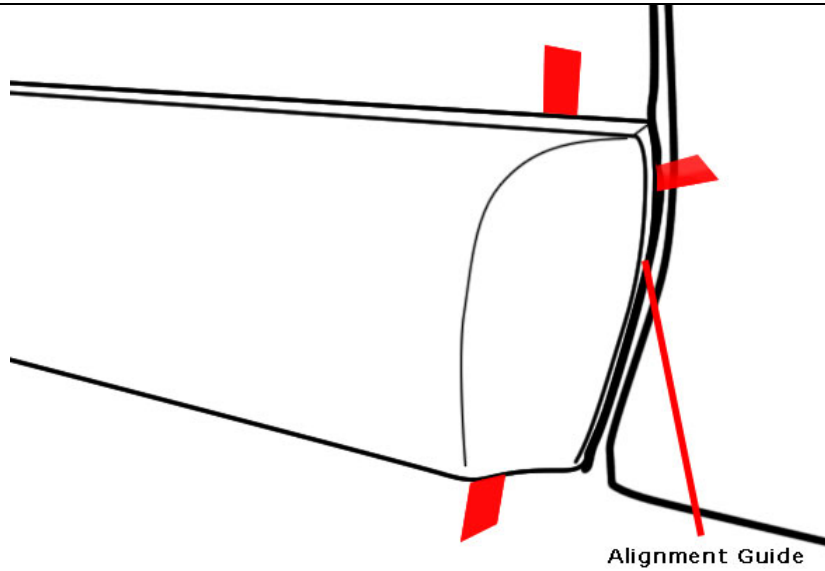

Once satisfied with the position, peel the red backing by pulling it out gently while keeping pressure against the door panels.