

DOWNFORCE – S2000 DFR REAR SPATS

INSTALLATION AND USER'S INSTRUCTIONS

Before beginning any removal or installation, please take time to thoroughly read through the instructions. This instruction is available for download online at <http://www.downforce.biz/manual/>

- There are several **WARNING** sections in the installation. Always read and follow the instruction to prevent injuries, accidents, and possible damage to the vehicle.
- Do not modify the Rear Spats in any way.
- Do not install the Rear Spats in any way other than described in the following instructions.
- If you have any questions about the use of the Rear Spats, ask Downforce about any concerns.
- Downforce and its dealers are not responsible for injuries, accidents, and damage to persons and property that arise from the use of this product.
- This product is for off road use only.

PART NAME	DFR REAR SPATS
PART NUMBER	DF-AHA320
VEHICLE	HONDA S2000 2004-2009

1

Requirements

The DFR Rear Spats require an AP2 rear bumper. This spat is designed to follow the curvature of the OEM rear bumper and mount using the existing mounting points on the rear bumper.


Tools and Equipments Needed




Allen Wrench
(3 mm)

2

Packing List

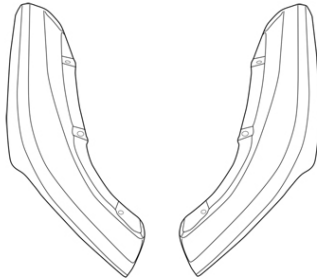

Pair of Rear Spats

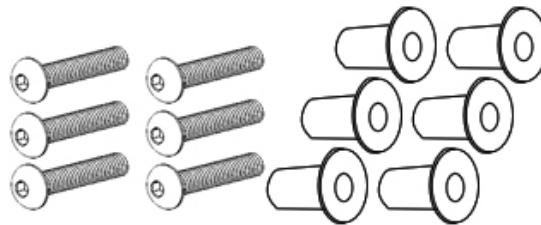


(6) Button Head Bolt

(6) Well-Nuts


3

Rear Spat Installation

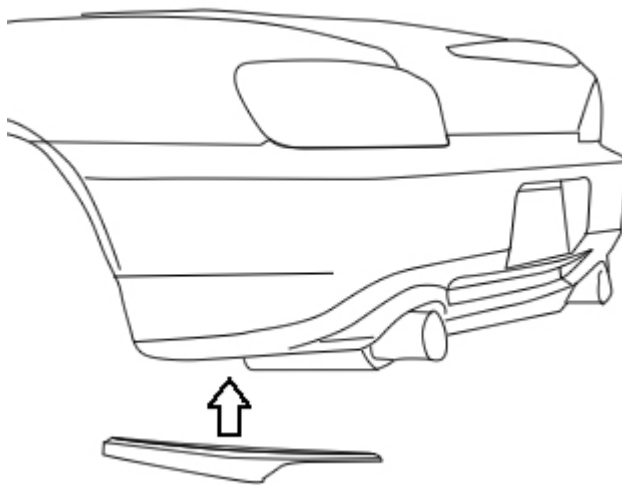


Using Well-Nuts


- 1.) Place the SPAT under the bumper as shown and align the mounting holes.
- 2.) Insert the Well-Nut through the SPAT and the rear bumper and screw in the bolt and tighten.

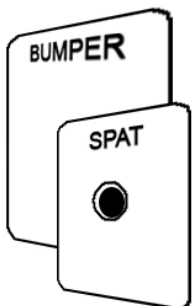


Align the hole

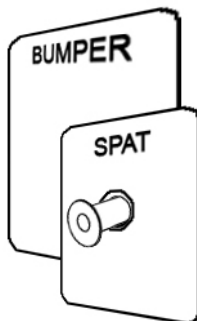

Insert the Well-Nut

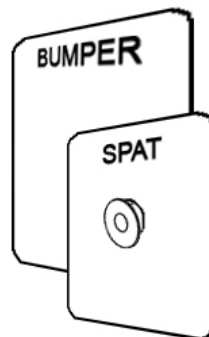

Push the Well-Nut in

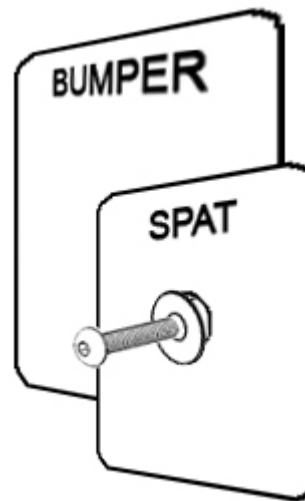

Thread bolt and tighten